

## SAFETY & WARNINGS

1. Install in accordance with national and local electrical code regulations.
2. This product is intended to be installed and serviced by a qualified, licensed electrician.
3. DO NOT connect directly to high voltage power. Install with a compatible Class 2 constant voltage LED driver (power supply).
4. Only install compatible 12V and 24VDC constant voltage luminaires.
5. This product is rated for indoor installation and is not protected against moisture.
6. Do not modify product beyond instructions or warranty will be void.

## QUICK SPECS / MODELS

### DI-ATT-RGBW-REM



Input	Operating Frequency	Transmitting Distance (RF)
3x AAA 1.5V Batteries (Not Included)	434MHz / 868 MHz	95 ft.



 
 
Input from Driver	Output to Load	Max Load
12 - 24VDC Constant Voltage	12 -24VDC Constant Voltage	4CH x 5A 4CH x 60W (12V) 4CH x 100W (24V)  4CH = 4 Channels

## TOOLS FOR INSTALL

Phillips-head screwdriver

Mini flat-head screwdriver


Wire stripper

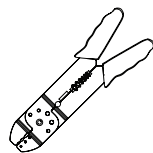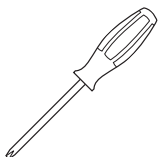

## SYNCING INSTRUCTIONS

### 1 INSTALL ATTRIBUTE RECEIVER SYSTEM

 
**TURN MAIN POWER OFF BEFORE INSTALLATION.**  
Refer to WIRING DIAGRAM on next page.



LED Driver



 ATTRIBUTE Receiver



LED Luminaire

### 2 SYNC RECEIVER TO ATTRIBUTE CONTROL

Add 3x AAA batteries (not included).



 
a. Wake up ATTRIBUTE control by pressing Power button.

ATTRIBUTE™ Receiver  
DI-ATT-RGBW-REC  
INPUT: 12 - 24VDC  
OUTPUT: 12 - 24VDC 4CH X 5A



LEARNING KEY


b. Press LEARNING KEY button on ATTRIBUTE receiver.

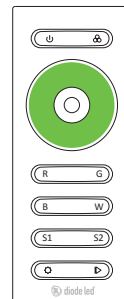

c. Swipe finger on color wheel.

d. Luminaire will flash to indicate pairing.


## OPERATION

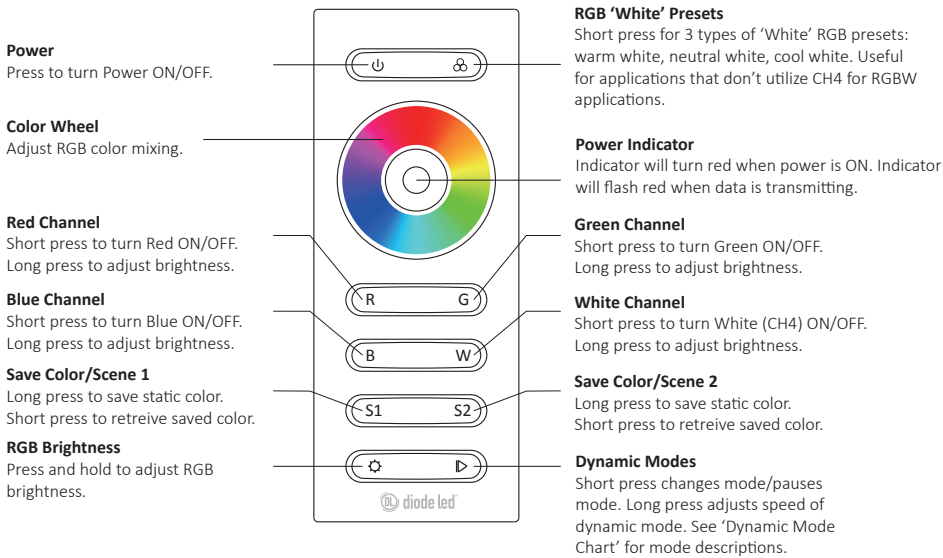 

## DYNAMIC MODE CHART

Mode	Description
1	Fade 1 - B M R O Y G C
2	Fade 2 - B G O W C M B
3	Fade 3 - R W C G C W B W
4	Skip 1 - R Y W C G W B M W Y
5	RGB Fade In/Out
6	RGB Fade In
7	RGB Fade Out
8	RGB Skip
9	Fade 4 - B M O G C
10	Fade 5 - W Y W M C W G W M C
11	All Channels Off
 
## SYSTEM DIAGRAM

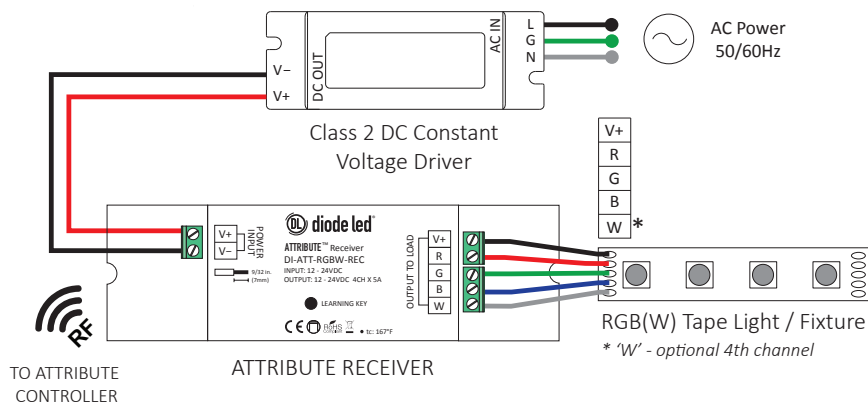

## TROUBLESHOOTING

Symptom	Common Cause
Remote won't function	<ul style="list-style-type: none"> <li>Check for dead AAA batteries.</li> <li>Remote must be turned on for operation (red indicator light on).</li> </ul>
Receiver does not sync with remote	<ul style="list-style-type: none"> <li>1) Turn off main power to receiver and turn back on. 2) Reset receiver by holding LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.</li> </ul>
Unpairing the Receiver	<ul style="list-style-type: none"> <li>Hold learning key down on receiver for 5 seconds until LED lights flash. This will delete the learned ID.</li> </ul>

### HOW TO RESET RECEIVER

If receiver is not operating or pairing correctly with control it may be necessary to turn power off/on and then reset the receiver. To reset, hold down the LEARNING KEY button for 5 seconds until LED flashes.

## ADDITIONAL RESOURCES

Visit the product web page at [www.DiodeLED.com](http://www.DiodeLED.com) for additional product specifications & warranty information.

### ATTRIBUTE COLOR CONTROLLER SPECIFICATION SHEET

For full specifications.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | [www.DiodeLED.com](http://www.DiodeLED.com) | [info@DiodeLED.com](mailto:info@DiodeLED.com)  
© 2015 Elemental LED Inc. All rights reserved. Specifications are subject to change without notice.