



TOUCHDIAL™ 5-Zone Remote
Control Dimmer



 
INSTALLATION GUIDE

SAFETY & WARNINGS

1. This product is rated for indoor installation and is not protected against moisture.
2. Do not modify product beyond instructions or warranty will be void.

QUICK SPECS / MODELS

DI-RF-REM-DIM-5



Input	Operating Frequency
1x CR2032 3V Battery (Included)	434MHz / 868 MHz

 
SUPPLIED ACCESSORIES

TOUCHDIAL Dimmer Control Mounting Bracket & Screws




TOOLS FOR INSTALL


Phillips-head screwdriver
(For mounting TOUCHDIAL Dimmer Control Mounting Bracket)

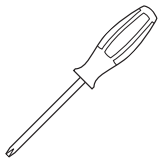

ADDITIONAL TOUCHDIAL COMPONENTS

 


DI-RF-REC-CV-A
TOUCHDIAL Receiver

 

DI-WIFI-RF-TRMS
TOUCHDIAL WiFi Hub

SYNCING INSTRUCTIONS

 
- 1** **INSTALL TOUCHDIAL RECEIVER SYSTEM**
Refer to TOUCHDIAL Receiver Installation Guide.



LED Driver




 TOUCHDIAL Receiver




LED Luminaire

 - 2** **SYNC MASTER RECEIVER TO TOUCHDIAL DIMMER**



 - a. Wake up TOUCHDIAL dimmer by short pressing Power button.

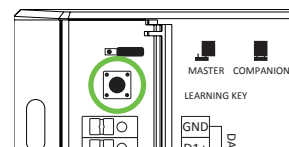

- b. Short Press LEARNING KEY button on TOUCHDIAL MASTER receiver.

 


- c. Short Press any zone button on control.
- d. Luminaire will flash to indicate pairing.

SYNCING CONT.

SYNCING NOTE

When syncing the TOUCHDIAL Dimmer, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

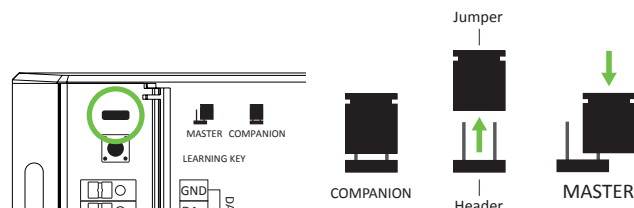

TROUBLESHOOTING

See *TOUCHDIAL Receiver Install Guide* for more troubleshooting tips.


Symptom	Common Cause
Remote won't function	<ul style="list-style-type: none">Check for dead CR2032 battery.Remote must be turned on for operation.
Master receiver does not sync with remote	<ul style="list-style-type: none">Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide.If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by holding LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.

OPERATION

Master Power ON/OFF

| Short press to turn zone ALL ZONES ON.

 ○ Short press to turn ALL ZONES OFF.

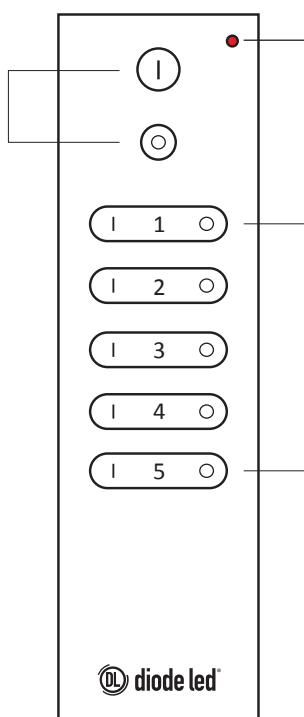

Power Indicator

Indicator will flash red when data is transmitting.

Single Zone Dimming Control

| Short press to turn SINGLE ZONE ON.
Long press to increase brightness.

○ Short press to turn SINGLE ZONE OFF.
Long press to decrease brightness.

SYSTEM DIAGRAMS

See the TOUCHDIAL RECEIVER Installation guide for SOLID COLOR system diagrams.

ADDITIONAL RESOURCES

Visit the product web page at www.DiodeLED.com for additional product specifications & warranty information.

TOUCHDIAL 5-ZONE REMOTE CONTROL DIMMER SPECIFICATION SHEET

For full specifications.

TOUCHDIAL RECEIVER SPECIFICATION SHEET & INSTALLATION GUIDE

For full specifications and installation instructions.

TOUCHDIAL WIFI HUB SPECIFICATION SHEET & INSTALLATION GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com
© 2019 Elemental LED Inc. All rights reserved. Specifications are subject to change without notice.