


SAFETY & WARNINGS

1. Only for use with compatible 12V and 24VDC constant voltage luminaires.
2. This product is rated for indoor installation and is not protected against moisture.
3. Do not modify product beyond instructions or warranty will be void.


QUICK SPECS / MODELS

DI-RF-REM-RGBW-1


FRONT

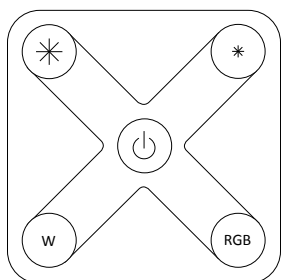

BACK

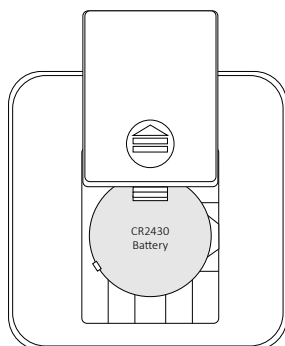

ADDITIONAL TOUCHDIAL COMPONENTS

 

DI-RF-REC-CV-A
TOUCHDIAL Receiver
(Required)

APPROVED LED LUMINAIRES

The TOUCHDIAL Mini Remote RGB(W) Control is compatible with all Diode LED 12V and 24VDC color constant voltage tape lights and fixtures.

Input	Operating Frequency	Dimensions
3V (CR2430) Battery (Included)	869.5/434MHz	2.16 x 2.16 x 0.43 in. (L x W x H)

 
TOUCHDIAL™ Mini Remote RGB(W) Control

INSTALLATION GUIDE


SYNCING INSTRUCTIONS

1 INSTALL TOUCHDIAL RECEIVER SYSTEM


Refer to TOUCHDIAL Receiver Installation Guide.




2 SYNC TOUCHDIAL CONTROL TO MASTER RECEIVER

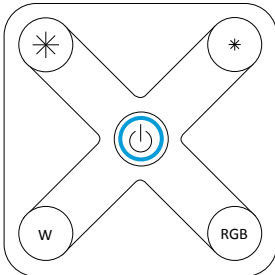

2.1 Short press Mini Remote RGB(W) Control Power button.

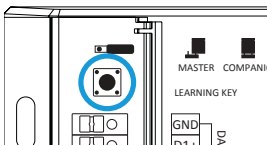

2.2 Short press LEARNING KEY button on TOUCHDIAL MASTER receiver.

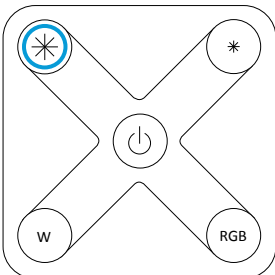


2.3 Short press the Increase Brightness button on the Mini Remote RGB(W) Control.

2.4 Luminaire will flash to indicate pairing.

SYNCING CONT.


SYNCING NOTE

When syncing the TOUCHDIAL Mini Remote RGB(W) Control, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

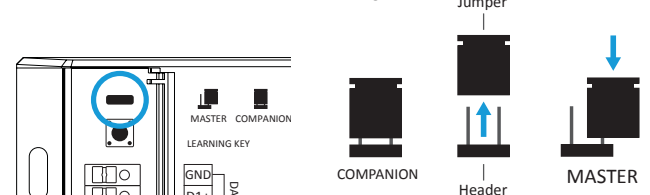

OPERATION

Hold to increase brightness.

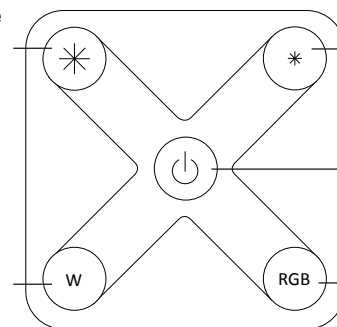

Hold to decrease brightness.

 
Short press to turn ON/OFF.

Hold to increase or decrease White brightness only.

Long Press to change RGB Color selected.

LOOKING FOR SYSTEM DIAGRAMS?

See the TOUCHDIAL RECEIVER (DI-RF-REC-CV-A) Installation guide for SOLID COLOR system diagrams.




TOUCHDIAL™ Mini Remote Dimmer

INSTALLATION GUIDE


BATTERY REPLACEMENT

1. Open Battery backplate on Remote.
2. Insert new battery.

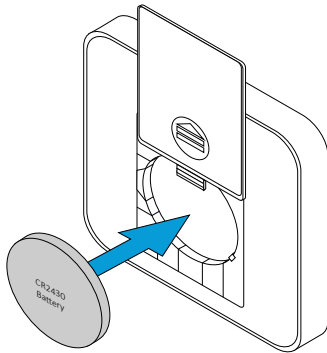

MOUNTING

1. Place Metal Mounting Plate on surface where desired, using included 3M Mounting Tape Pad.
2. Place Mini Remote onto Mounting Plate. The Magnet inside Mini Remote will hold it in place.

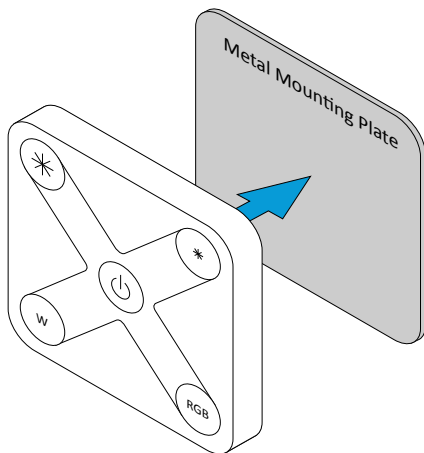

TROUBLESHOOTING

See TOUCHDIAL Receiver Install Guide for more troubleshooting tips.

Symptom	Common Cause
Control won't function	<ul style="list-style-type: none">• Check for dead batteries.• Remote must be turned on for operation.
Master receiver does not sync with remote	<ul style="list-style-type: none">• Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide.• If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by long pressing LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.

ADDITIONAL RESOURCES

TOUCHDIAL MINI REMOTE RGB(W) CONTROL SPEC SHEET

For full specifications.

TOUCHDIAL RECEIVER SPEC SHEET & INSTALL GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com
© 2019 Elemental LED, Inc. All rights reserved. Specifications are subject to change without notice.