

**SAFETY & WARNINGS**

1. This product is rated for indoor installation and is not protected against moisture.
2. Do not modify product beyond instructions or warranty will be void.

**QUICK SPECS / MODELS**


**DI-RF-REM-TW-4**



Input	Operating Frequency
3x AAA 1.5V Batteries (Not Included)	434MHz / 868 MHz


**SUPPLIED ACCESSORIES**

TOUCHDIAL Remote Control Mounting Bracket

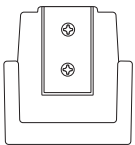

**TOOLS FOR INSTALL**


Phillips-head screwdriver  
(For mounting TOUCHDIAL Remote Control Mounting Bracket)

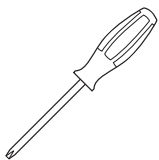

**ADDITIONAL TOUCHDIAL COMPONENTS**




DI-RF-REC-CV-A  
TOUCHDIAL Receiver

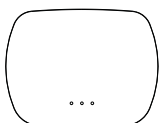


DI-WIFI-RF-TRMS  
TOUCHDIAL WiFi Hub

**SYNCING INSTRUCTIONS**

 
**1 INSTALL TOUCHDIAL RECEIVER SYSTEM**  
Refer to TOUCHDIAL Receiver Installation Guide.



LED Driver

 

TOUCHDIAL Receiver

 


LED Luminaire

**2 SYNC MASTER RECEIVER TO TOUCHDIAL CONTROL**  
Add 3x AAA batteries (not included).



a. Wake up TOUCHDIAL control by pressing Power button. A red light will indicate remote is turned on.

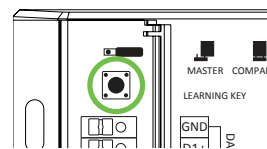

b. Short press LEARNING KEY button on TOUCHDIAL MASTER receiver.




c. (1) Press any zone button on control, then (2) swipe finger on color wheel.

d. Luminaire will flash to indicate pairing.

## SYNCING CONT.

### SYNCING NOTE

When syncing the TOUCHDIAL Remote, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

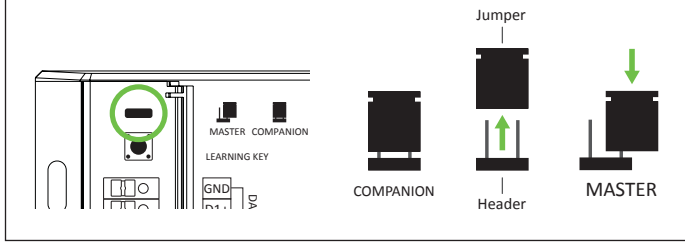


## TROUBLESHOOTING

See *TOUCHDIAL Receiver and WIFI Hub Install Guide* for more troubleshooting tips.

Symptom	Common Cause
Remote won't function	<ul style="list-style-type: none"> <li>Check for dead AAA batteries.</li> <li>Remote must be turned on for operation (red indicator light on).</li> </ul>
Master receiver does not sync with remote	<ul style="list-style-type: none"> <li>Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide.</li> <li>If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by long pressing LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.</li> </ul>

## OPERATION

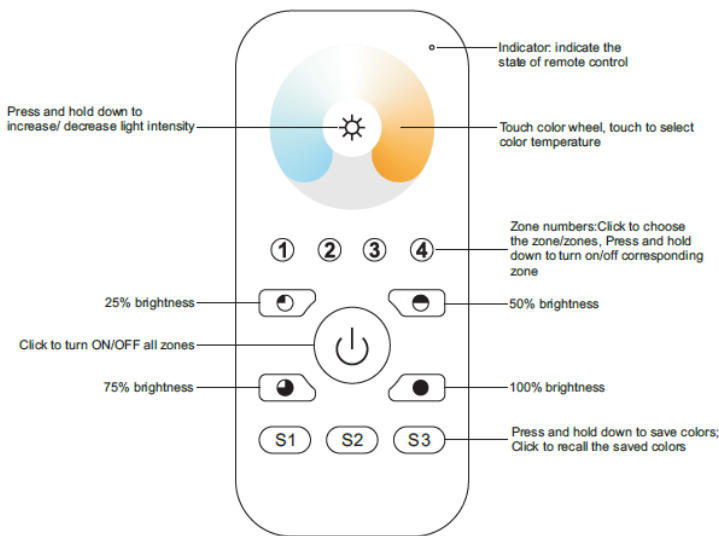

## ADDITIONAL RESOURCES

Visit the product web page at [www.DiodeLED.com](http://www.DiodeLED.com) for additional product specifications & warranty information.

### TOUCHDIAL TUNABLE WHITE REMOTE CONTROL SPECIFICATION SHEET

For full specifications.

### TOUCHDIAL RECEIVER SPECIFICATION SHEET & INSTALL GUIDE

For full specifications and installation instructions.

### TOUCHDIAL WIFI HUB SPECIFICATION SHEET & INSTALL GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | [www.DiodeLED.com](http://www.DiodeLED.com) | [info@DiodeLED.com](mailto:info@DiodeLED.com)  
 © 2019 Elemental LED Inc. All rights reserved. Specifications are subject to change without notice.