

 
SAFETY & WARNINGS

1. Only for use with compatible 12V and 24VDC constant voltage luminaires.
2. This product is rated for indoor installation and is not protected against moisture.
3. Do not modify product beyond instructions or warranty will be void.


QUICK SPECS / MODELS

DI-RF-WPD-DIM-2

FRONT

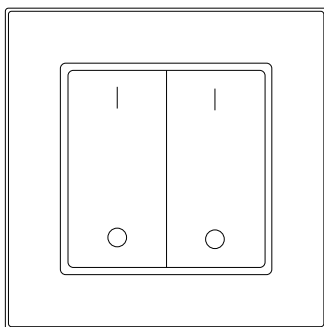


BACK

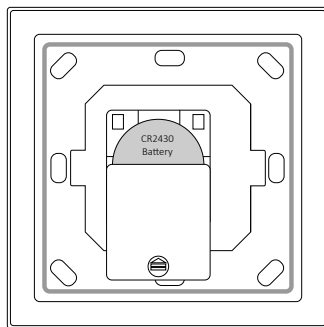 

Input	Operating Frequency	Dimensions
3V (CR2430) Battery (Included)	868/869.5/434MHz	3.38 x 3.38 x 0.55 in. (L x W x H)

 ADDITIONAL TOUCHDIAL COMPONENTS

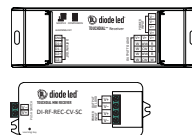


DI-RF-REC-CV-A
TOUCHDIAL Receiver, or
DI-RF-REC-CV-SC
TOUCHDIAL Mini Receiver
(Required)

APPROVED LED LUMINAIRES

The TOUCHDIAL Dual Wall Paddle Dimmer is compatible with all Diode LED 12V and 24VDC single color constant voltage tape lights and fixtures.

TOOLS FOR INSTALL

 Phillips-head
screwdriver

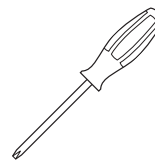


TOUCHDIAL™ Wall Dual Paddle Dimmer

INSTALLATION GUIDE


SYNCING INSTRUCTIONS

1 INSTALL TOUCHDIAL RECEIVER SYSTEM

 
Refer to TOUCHDIAL Receiver Installation Guide.



LED Driver

 


TOUCHDIAL Receiver

 


LED Luminaire

2 SYNC TOUCHDIAL CONTROL TO MASTER RECEIVER

 ZONE 1 ZONE 2

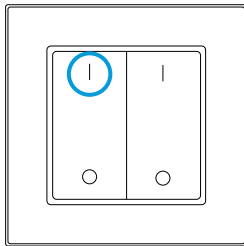


 - 2.1** Short press ZONE 1 TOUCHDIAL Dual Wall Paddle Dimmer Power button.

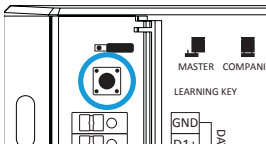

- 2.2** Short press LEARNING KEY button on TOUCHDIAL MASTER receiver.

 ZONE 1 ZONE 2

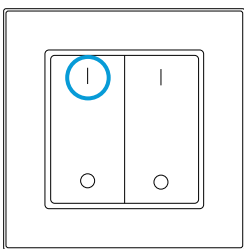


- 2.3** Short press Zone 1 TOUCHDIAL Dual Wall Paddle Dimmer Power button.

- 2.4** Luminaire will flash to indicate pairing.

- 2.5** To expand your system, repeat the syncing process using Zone 2 power button.

SYNCING NOTE

 When syncing the TOUCHDIAL Dual Wall Paddle Dimmer, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

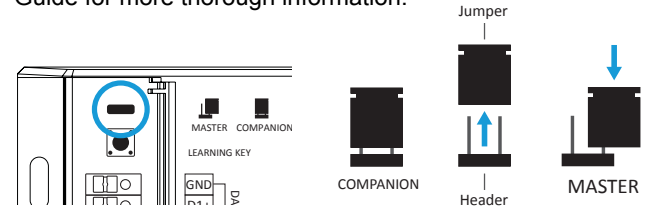


OPERATION

ZONE 1 ZONE 2

Short press to turn ON Zone 1.
Hold to increase brightness.

 Short press to turn OFF Zone 1.
Hold to decrease brightness.


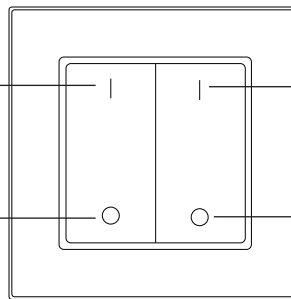


Short press to turn ON Zone 2.
Hold to increase brightness.

Short press to turn OFF Zone 2.
Hold to decrease brightness.

LOOKING FOR SYSTEM DIAGRAMS?

  
See the TOUCHDIAL RECEIVER (DI-RF-REC-CV-A) or TOUCHDIAL Mini Receiver (DI-RF-REC-CV-SC) Installation guide for SOLID COLOR system diagrams.



TOUCHDIAL™ Wall Dual Paddle Dimmer

INSTALLATION GUIDE

 
BATTERY REPLACEMENT

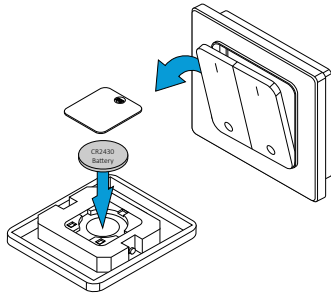

1. Remove Switchplate and Switch from Switch Mount.
2. Open Battery backplate on Switch.
3. Insert new battery.
4. Place Switch and Switchplate back into Switch Mount.

MOUNTING

 1. Place Base Mount on surface where desired, ensuring it is level.
2. Screw Base Mount to surface using included Screws.
3. Place Faceplate, Switch Mount, Switch, and Switchplate onto front of Base Mount.

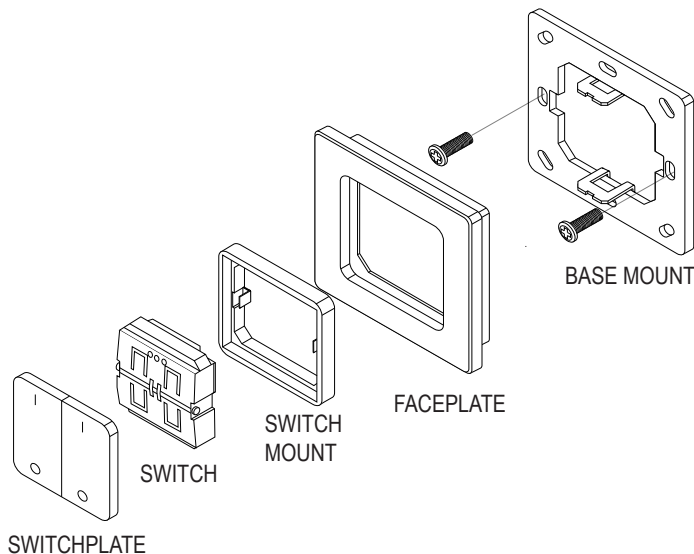

TROUBLESHOOTING

See TOUCHDIAL Receiver Install Guide for more troubleshooting tips.

Symptom	Common Cause
Control won't function	<ul style="list-style-type: none">• Check for dead batteries.• Remote must be turned on for operation.
Master receiver does not sync with remote	<ul style="list-style-type: none">• Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide.• If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by long pressing LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.

ADDITIONAL RESOURCES

TOUCHDIAL DUAL WALL PADDLE DIMMER SPEC SHEET

For full specifications.

TOUCHDIAL RECEIVER SPEC SHEET & INSTALL GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com
© 2019 Elemental LED, Inc. All rights reserved. Specifications are subject to change without notice.